

# Pagers

NEC

Owners Manual



## MESSAGE MAKER™ II Pagers



[Click Here For Warranty Information](#)

## Pager Overview



- To review messages
- To enter or confirm various settings
- To review messages
- To change settings




Main button

- To turn power on
- To enter or confirm certain functions
- To display menu

[To Turn Pager On](#)



- Press and hold main button.

## To Turn Pager Off


- Press main button. "**SET 1**" is displayed.
- Press  repeatedly until "**turn OFF**" is displayed.
- Press . "**OFF**" is displayed and flashing.
- Press . "**OFF**" will stop flashing and turn off.

## To Set Alerts



- Press main button. "**SET 1**" is displayed and current alert icons are flashing.
- Press . Current alert is displayed and alert icons are flashing.
- Press  repeatedly to select 1 of the 4 alerts listed below.

Press  to confirm.

**1. BEEP 1**  - Standard Alert

- When BEEP 1 is selected the number in parenthesis flashes, indicating the current standard alert.

- Press  repeatedly to select any of


the 3 following normal alerts. Press  to confirm.


**BEEP 1 (1)** - Single Beep

**BEEP 2 (2)** - Double Beep

**BEEP 3 (3)** - Accelerated Beep I (opt.), II (opt.), III

**2. BEEP 2**  - Musical Alert

- When **Beep 2** is selected, the number in parenthesis is flashing, indicating the current musical alert. Press 

repeatedly to select any of the 4 or 8 musical alert melodies. Press  to confirm.










**3. BEEP 3**  - Chirp and Vibrate Alert

- Press  to confirm.

**4. -----**  Vibrate Alert

- Press  to confirm.

## To Set Alarm

- Press main button. "SET 1" is displayed.
- Press . "SET 2" is displayed and alarm icon is flashing.
- Press . "OFF or ON" is flashing. Press  until "ON" is flashing. Press  to confirm.
- Hour is flashing. Press  to select desired hour. Press  to confirm.
- Minute is flashing. Press  to select desired minute.  
Press to confirm.
- Communication icon is flashing. Press  to select desired communication icon. Press  to confirm.
- Press main button.